


(4) Registered node ID or room ID screen (the C1 - C5 screen)

- Rotate the **DIAL** knob to select a previously registered node/room (maximum 5 nodes/rooms) on the **C1 - C5** screen and, then press the **[AMS]** key or **PTT** switch to connect to the node/room.

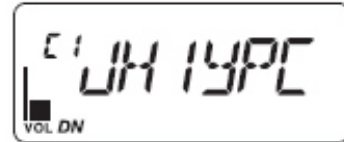

- **Registering the node/room:**


Press and hold the **[1] - [5]** key to register the node/room (**C1 - C5**) on the connected node ID or room ID screen (**Cn**).

- **Cancelling the connected node/room:**

Select the node/room (**C1 - C5**) then press and hold the **[HM/RV]** key to delete the registered node/room.

(5) Direct entry screen (the En screen)

Direct connection to a node or room may be made by inputting the other node ID or room ID (5 digits) manually.

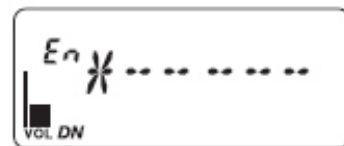

- Pressing the numeric keys (5 digits), and then press of the **[AMS]** key will request connection with another node ID or room ID.

- **Clearing the input node ID or room ID:**

Press and hold the **[HM/RV]** key

- **Cancelling the input node ID or room ID:**

Pressing the **[BAND]** key to return to the node ID screen (**Lc**) or the connecting node ID or room ID screen (**Cn**).



When a node has been connected, the node or room connection may be changed by inputting a different node ID or room ID.

When connecting to a node or room, **"CONNECT"** (CONNECT) is displayed on the screen, and the display is automatically switched to the connecting node ID or room ID screen (**Cn**).



In the case when the selected node or room is not connected, one of the following will be displayed on the screen.

"OFFLINE" (OFFLINE): Node or room is not in operation.

"BUSY": Another node is connecting.

7. Transmit to communicate with the WIRES-X Internet Link.

- Operations of the **[AMS]** key, **PTT** switch, **[BAND]** key, and **[V/M]** key are described in the below chart.

Operation method (Operation screen)	Description
Press the [AMS] key or the PTT switch (C0 / C1 - C5 / En screen*)	Connect to the displayed node/room or change the destination connection. (*The PTT switch is disabled on the En screen)
Press and hold the [BAND] key (Lc / Cn / C0 / C1 - C5 / En Screen)	Disconnect from the connected node or room.